

Adjusting Each Function

Adjusting each functions of PT-U80 by PC

Setting up Clock Alarm, Display Resolution and Hold Time that PT-U80 can not set up alone

The screenshot shows the 'Thermometer Application' software interface. The interface includes several sections: 'Type Setting', 'Current Setting', 'Time Setting', and 'Extend Setting'. Callout boxes with red arrows point to specific fields and buttons, providing instructions for each. The callouts include:

- Input some(unique) names to distinguish a connected thermometer.
- Register Product Type-Number then Product Seen On The Application
- Current Emission Value, High and Low Alarm Temperature value and Time appear
- Store adjusted each items to CSV file
- Enter High Alarm Temperature Value
- Enter High Alarm Function
- Display Current PC Time
- Forward Time of PC to Thermometer
- Enter Clock Alarm Time
- Enter Clock Alarm Operating Time
- Activate Clock Alarm Entered Every Time
- Activate Time Clock Alarm Entered once
- Click here to adjust each Clock Alarm
- Select Display Resolution
- Forward Clock Alarm Time to Thermometer
- Specify Hold Time
- Forward YY/MM/DD entered to Thermometer
- Enter Low Alarm Temperature Value
- Forward Alarm Value Entered To Thermometer
- Enter Low Alarm Function
- Forward YY/MM/DD entered to Thermometer
- Enter Optional YY/MM/DD and Time
- Forward Resolution Entered to Thermometer
- Forward Hold Time Entered to Thermometer
- Return all specific Value to Initial Mode
- Log-on Optex Website

Sample) To set up High Alarm

- 1) Connect PT-U80 to PC then activate "THERMO HUNTER" program
- 2) Select "Adjusting Each Function" on TAB
- 3) Input High Alarm Temperature you want to set up
- 4) Click "ON" to activate High Alarm Function on the above procedure #6
- 5) Click "SET" to forward DATE inputted to thermometer PT-U80

TASHIKA BOEKI SHOKAI K.K.

1-12, Kaiyo-cho, Ashiya, 659-0035, JAPAN

Tel: + 81-797-23-9035 Fax: + 81-797-23-2105

e-mail: sales@tashika.co.jp URL: www.tashika.co.jp